



USB to Serial-Value Quick Installation Guide

Introduction

The *USB to Serial-Value* adds one 9-pin RS232 serial port to USB-equipped computer systems.

Key Features and Benefits

- Compliant with USB specification, revision 1.1
- RoHS compliant

Serial Number Sticker

For future product return or exchange, this serial number is required. Please keep it for your reference.



System Requirements

- USB equipped computer with an available USB port
- Windows® 8 (32-/64-bit) / 7 (32-/64-bit) / Vista (32-/64-bit) / XP (32-/64-bit) / Server 2003 & 2008 (32-/64-bit) / Server 2008 R2 / 2000

Package Contents

- *USB to Serial-Value*
- Driver CD
- Quick installation guide

Layout



Figure 1

Driver Installation

Make sure the driver is installed **Before** plugging the *USB to Serial-Value* into the computer.

Windows 8 (32-/64-bit) / 7 (32-/64-bit) / Server 2008 R2

1. Insert the driver CD.
2. At the *AutoPlay* box: Click **Open folder to view files**, then double click **Setup**.
If *AutoPlay* doesn't start: Click **Windows key** and **R**, type **D:\setup.exe**, then click **OK**. (Change **D:** to match your CD-ROM drive letter)
3. At the User Account Control, click **Yes**.
Skip this step if not prompted.
4. Click **Next**, then click **Finish**.
5. Plug the *USB to Serial-Value* into a USB port and the driver will install automatically.
6. Restart Windows to complete the installation.

Windows Vista (32-/64-bit)

1. Insert the driver CD.
2. At the CD autoplay window: Double click **Setup**.
If the CD doesn't auto-start: Click **Start**, in the **Start Search** box, type **D:\setup.exe**, then press **Enter**. (Change **D:** to match your CD-ROM drive letter)
3. At the User Account Control, click **Allow**.
4. Click **Next**, then click **Finish**.
5. Plug the *USB to Serial-Value* into a USB port and the driver will install automatically.
6. Restart Windows to complete the installation.

Windows Server 2008 (32-/64-bit)

1. Insert the driver CD.
2. At the *AutoPlay* box: Click **Open folder to view files**, then double click **Setup**.
If *AutoPlay* doesn't start: Click **Start**, in the **Start Search** box, type **D:\setup.exe**, then press **Enter**. (Change **D:** to match your CD-ROM drive letter)

3. Click **Next**, then **Finish**.
4. Plug the *USB to Serial-Value* into a USB port and the driver will install automatically.
5. Restart Windows to complete the installation.

Windows XP (32-/64-bit) / Server 2003 (32-/64-bit) / 2000

1. Insert the driver CD.
2. Click **Start, Run**, type **D:\setup.exe**, then click **OK**. (Change **D:** to match your CD-ROM drive letter).
3. Click **Next**, then **Finish**.
4. Plug the *USB to Serial-Value* into a USB port and the driver will install automatically.
5. Restart Windows to complete the installation.

To Verify Windows Installation

1. Check **Device Manager** to verify installation.

For Windows 8 / 7 / Server 2008 R2: Right click **Computer**, click **Manage**.

For Windows Vista: Right click **Computer**, click **Manage**, click **Continue**.

For Server 2008: Right click **Computer**, click **Manage**, double click **Diagnostics**.

For XP / Server 2003 / 2000: Right click **My Computer**, click **Manage**.

2. Click **Device Manager**.
3. Double click **Ports (COM & LPT)**, a **Prolific USB-to-Serial Comm Port...** should be displayed.