



# Digital to Analog Audio Converter

## Quick Installation Guide

### Introduction

The *Digital to Analog Audio Converter* allows you to convert digital audio to analog L/R stereo.

### **Key Features and Benefits**

- Converts Coaxial or Toslink digital audio to analog L/R stereo output
- Supports audio sampling rate at 32, 44.1, 48 and 96KHz
- Provides electromagnetic-noise-free transmission
- Easy to install and simple to operate
- Metal housing for better RF shielding

### **Serial Number Sticker**

For future product return or exchange, this serial number is required. Please keep it for your reference.

# Package Contents

- Digital to Analog Audio Converter
- Power adapter
- Quick installation guide

## Layout



**Figure 1: Input**



**Figure 2: Output**

# Hardware Installation

---

1. Power off all devices you plan to connect to this converter.
2. Connect your audio source to the converter's **Input** connector using a Toslink or Coaxial cable (not included).
3. Connect your A/V receiver or amplifier to the converter's **Output** connectors using a R/L cable (not included).
4. Connect the converter's power adapter.
5. Turn on the A/V receiver or amplifier, then the audio source.
6. The *Digital to Analog Audio Converter* is now ready to use.