


Features

- HDMI 1.2 compliant
- IR remote control
- Remote control via Micro USB
- OSD control interface
- VGA Maximum pixel rate : 165MHz
- De-interfacing supported
- Supports noise reduction and video enhancement features
- Video enhancement support
- Active video area adjustment supported
- USB firmware upgradable for expanding compatibility

Package contents

1. HDMI to VGA & Audio Scaler Converter
2. Power adapter 5V/2A
3. IR Remote control
4. Ear mount
5. Quick start guide

Layout

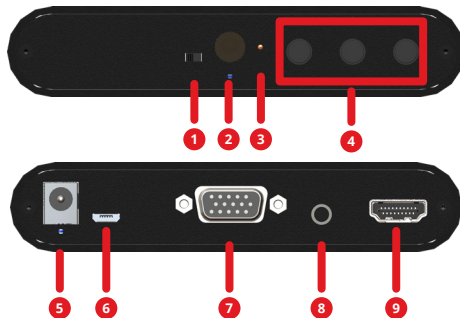

1. Dip Switch: For firmware update
[←] normal mode [→] firmware update
2. IR sensor:
receive the IR commands from IR remote
3. LED indicator:
[Orange] power [Green] signal & power
4. Push Button:
[Left] Down [Mid] Up [Right] Menu/Enter
5. DC jack: connect to power adapter 5V/2A

6. Micro USB:

Firmware update & software control port

7. VGA output: connect to VGA display


8. Stereo Audio output:

9. HDMI IN: connect to HDMI source

IR Remote Control

| Button | Function |
|--------------|----------------------------------|
| FREEZE | Freeze video |
| ASPECT RATIO | Aspect ratio change |
| BLANK | Blank video |
| EXIT | Exit OSD |
| ENTER | Enter key |
| UP | Up key |
| LEFT | Left key |
| RIGHT | Right key |
| DOWN | Down key |
| MENU | Menu on |
| INPUT INFO | Source resolution information |
| 1080p60 | Select 1080p60 output resolution |
| 1080i60 | Select 1080i60 output resolution |
| 720p60 | Select 720p60 output resolution |
| 480p60 | Select 480p60 output resolution |

Application

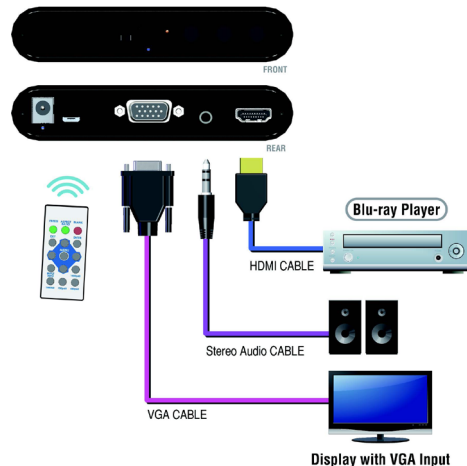

On-Screen Display Menu

| | | |
|--------------|-----------------|---------------------------|
| 1.Image | Contrast | 0~255 of Contrast Level |
| | Brightness | 0~255 of Brightness Level |
| | Saturation | 0~255 of Saturation Level |
| | Hue | 0~255 of Hue Level |
| | B/W Extension | Off, On |
| | Color Tone | Off, Green, Skin |
| | Edge Enhance | Off, Max, Mid, Min |
| | Sharpness | 0~127 of Sharpness Level |
| 2.Adjustment | Out Resoult | |
| | Out ColorSpace | |
| | Over Scanning | |
| | Aspect Ratio | 16:9, 4:3 |
| 3. System | In-sync Info | |
| | Default Pattern | |
| | Factory Reset | |
| | F/W Version | |

Software control

1. Please search this product on SIIG web site and find the download link on "Downloads" page.
2. Connect the device to PC via USB to mini-USB cable
3. Search the right COM port to connect

BLANK PAGE

ACEPRO_{AV}

HDMI to VGA & Audio Scaler Converter

Quick Start Guide

