

Specifications

Host Interface	USB 3.0
Connectors	RJ45 Ethernet, Female & USB 3.0 Type-A, Male
Housing Material	Solid Plastic
Built-in Cable Length	5.90" (150mm)
Power	USB bus-powered
Output Cable Range	CAT-5e 100m (Max.)
Operating Temperature	32 ~ 140° F
Storage Temperature	-4 ~ 140° F
Humidity	5% to 85% RH
Dimensions	2.56" (W) x 0.79" (H) x 1.18" (D)
Weight	0.07 lbs

System Requirements

- Windows® 10 (32-/64-bit) / 8.1 (32-/64-bit) / 8 (32-/64-bit) / 7 (32-/64-bit) / Vista (32-/64-bit) / XP (32-/64-bit)
- Windows® Server 2012 / 2008 R2 / 2008 / 2003 (32-/64-bit)
- Mac OS X® v10.6 to 10.11

1

Package Contents

- SuperSpeed USB 3.0 Gigabit LAN Adapter (Black / White)
- Driver CD
- User Reference Guide

Product Layout



- **RJ45 Ethernet Port:** Connects to an Ethernet cable (not included)
- **USB 3.0 Type A:** Connects to an available USB port of the computer

LED Indicators

- **Activity LED (Yellow):** Blinking when network activity is detected
- **Connectivity LED (Green & Blue):** On when network is connected

2

Windows Driver Installation

Note: Windows 7 and later have built in driver support for this adapter. Simply plug in the adapter and the driver will load automatically. If the built in driver doesn't load properly, please follow the instructions below.
For earlier Windows OS, please follow the instructions below.

1. Browse the driver CD.
2. Click and enter the folder according to your operating system.
3. Click and select **setup.exe** file.
4. At the User Account Control, click **Yes**.
5. At the InstallShield Wizard window, select **Next / Install**.
6. Wait for the InstallShield Wizard to complete, click **Finish**.
7. Plug the adapter into an available USB port, then connect your Ethernet cable.
8. Restart computer and the adapter is ready for use.

To Verify Installation on Windows


1. On the desktop, right click **This PC, Computer** or **My computer** option, then click **Manage**.
2. Select **Device Manager**, and double click **Network adapters** section.
3. **Realtek USB GbE Family...** should be shown.

3

Mac Driver Installation

1. Insert the driver CD, and the icon will display on the desktop automatically.
2. Double click **Drivers** icon, and choose **MAC \ RTUNICv...**
3. At Introduction, click **Continue**.
4. At Read me, click **Continue**.
5. At License, click **Continue / Agree**.
6. At Installation Type, click **Install** or **Upgrade**.
7. Enter Name and Password, then click **OK** or **Install software**.
8. Click **Continue Installation**.
9. At Summary, click **Restart** to restart the computer.
10. After rebooting, connect the adapter to the computer and to your Ethernet cable.

To Verify Installation on Mac

1. Click  on the left-top corner of the taskbar, and choose **About This Mac**.
2. Choose **More Info...**, then select **System Report...**
3. Expand **Hardware / USB** section. **USB 10/100/1000 LAN** should be shown.

4

Uninstall the driver on Mac OS

1. Insert the driver CD.
2. Double click the **Drivers** icon on desktop, then choose **MAC** folder.
3. Select **uninstall.zip**, and enter **uninstall** folder.
4. Choose **uninstall.command**, and enter your password.
5. The uninstallation is completed.

FAQ & Solutions

If the adapter is not working properly:

- Make sure both connections of the adapter are secure.
- Try other USB ports of the computer.
- Go to **Device Manager** to check whether the driver is installed successfully. (Refer to page 3 or 4 for details)

5



SuperSpeed USB 3.0 Gigabit LAN Adapter User Reference Guide



Introduction

SuperSpeed USB 3.0 Gigabit LAN Adapter adds a RJ45 Ethernet port to a USB-enabled computer.

LOT Number Sticker

For future product return or exchange, this LOT number is required. Please keep it for your reference.

