

SATA II PCIe QuickInstallation Guide

Introducing the SATA II PCIe

The SATA II PCIe is an ultra high-speed dual channel Serial ATA Generation 2 controller used in PCI Expressenabled systems.

Features and Benefits

- Compliant with PCI Express Base Specification Revision 1.0a
- Compliant with Serial ATA 1.0a specification with support for full complement of SATA II optional features
- PCI Express 1-lane (x1) SATA II adapter works with PCI Express slots with different lane width
- Installs in any available PCI Express slot and supports data transfer rates up to 3.0Gbps (300MBps)
- Spare enhanced low profile bracket is included to work in low profile chassis
- Supports Native Command Queuing (NCQ), Nonzero offsets NCQ, and Out-of-order data delivery NCQ
- Independent command fetch, scatter/gather, and command execution

System Requirements

- PCI Express-enabled system with an available PCI Express slot
- Windows® 8 (32-/64-bit) / 7 (32-/64-bit) / Vista (32-/64-bit) / XP (32-/64-bit) / Server 2003 & 2008 (32-/64-bit) / Server 2008 R2 / 2000

Package Contents

- SATA II PCIe adapter
- Spare enhanced low profile bracket
- SATA data cable
- SATA 15-pin power cable
- Driver CD & quick installation guide

Board Layout

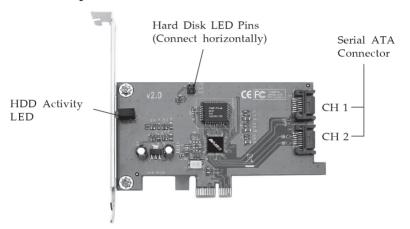


Figure 1. SATA II PCIe Board Layout

Hardware Installation

Note: For low-profile systems, replace the currently mounted bracket with the included low profile bracket.

General instructions for installing the card are provided below. Since the design of computer cases and motherboards vary, refer to your computer's reference manual for further information, if needed.

Static Electricity Discharge may permanently damage your system. Discharge any static electricity build up in your body by touching your computer case for a few seconds. Avoid any contact with internal parts and handle cards only by their external edges.

- 1. Turn OFF the power to your computer and any other connected peripheral devices.
- 2. Unplug the power cord from the computer. Remove the computer cover.
- 3. Remove the slot bracket from an available PCIe slot.
- 4. To install the card, carefully align the card's bus connector with the selected PCIe slot on the motherboard. Push the board down firmly, but gently, until it is well seated.
- 5. Replace the slot bracket holding screw to secure the card.

Device Connection

The *SATA II PCIe* is a dual channel Serial ATA II controller that supports up to two Serial ATA hard disk drives. If you plan to use the second channel, you will need to purchase another SATA data cable.

- 1. Install your Serial ATA hard disk drive(s) into the chassis.
- 2. Connect the hard disk drive to the system power supply, use the included **SATA power cable** if needed.

Note: For hard disk drives with both SATA power connector and legacy 5-pin connector, use either the SATA power connector or the legacy 5-pin power connector. Do not use both power connectors, using both power connectors will damage the hard disk drive.

3. Connect one end of the **SATA data cable** to the hard disk drive.



Figure 2. Hard disk drive connections

4. Attach the other end of the **SATA data cable** to the Serial ATA connector on the *SATA II PCIe*.

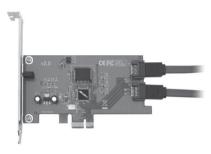


Figure 3. Connecting SATA data cable

- 5. Follow the same instructions when connecting a second hard disk drive. Device connection is now complete.
- 6. Replace the computer cover and reconnect the power cord.

Driver Installation

This section provides information for how to install the *SATA II PCIe* drivers.

Windows 8 (32-/64-bit)

New Windows 8 (32-/64-bit) Installation

<u>IMPORTANT</u>: If you don't have two CD-ROM drives, copy the contents of **Win8** folder in the driver CD to your Flash Drive, then follow the directions below.

- Install the board and follow Microsoft procedures to install Windows accordingly.
 At Install Windows or Windows Setup, click Next,
- then click **Install now.**3. Click **Browse**.
- 4. Double click folder **Win8** located on the driver CD
- or your Flash Drive.

 <u>For 32-bit</u>: Click **32bit**, then click **OK**.

 <u>For 64-bit</u>: Double click **64bit**, click **AMD64**, then click **OK**.
- 5. Select **Silicon Image Sil 3132...Controller**, then click **Next**.
- 6. Check I accept the license terms, click Next.
- 7. Select **Custom...(advanced)**, then click **Next**.
- 8. Click **OK** to continue. Skip this step if not prompted.
- 9. Wait several seconds, then follow the on-screen instructions to complete Windows installation.

Existing Windows 8 (32-/64-bit) Installation

- 1. Install the board and boot up Windows.
- 2. Insert the driver CD. Close the **AutoPlay** box if prompted.
- 3. Right click Computer, Manage, Device Manager.
- 4. Right click Mass Storage Controller, click Update Driver Software.
- 5. Click Browse my computer for driver software.
- 6. For 32-bit: Type D:\Win8\32bit

 For 64-bit: Type D:\Win8\64bit\AMD64

 (Change D: to match your CD/DVD-ROM drive letter)
- 7. Click **Next**, and click **Close**.

Windows 7 (32-/64-bit) / Server 2008 R2 New Windows 7 (32-/64-bit) / Server 2008 R2 Installation

to install Windows accordingly.

follow the directions below:

then click **Install now**.

Click Browse.

1.

2.

3.

5.

4. Double click folder **Win7** .

For Window 7 32-bit: Click **32bit**, then click **OK**.

If you don't have two CD-ROM players, copy the contents of **Win7** folder in the driver CD to your pen drive, then

Install the board and follow Microsoft procedures

At Install Windows or Windows Setup, click Next,

For Window 7 32-bit: Click **32bit**, then click **OK**. *For Windows 7 64-bit / Server 2008 R2*: Double click **64bit**, click **AMD64**, then click **OK**.

Select Silicon Image Sil 3132...Controller, then click

- Next.6. Check I accept the license terms, click Next.
- 5. Check I accept the heelise terms, check ivext.
- 7. Select **Custom...(advanced)**, then click **Next**.
- 8. Click **OK** to continue. Skip this step if not prompted.9. Wait several seconds, then follow the on-screen instructions to complete Windows installation.

Existing Windows 7 (32-/64-bit) / Server 2008 R2 Installation

- 1. Install the board and boot up Windows.
- 2. Insert the driver CD. Close the **AutoPlay** box if prompted.
- 3. Right click **Computer**, **Manage**, **Device Manager**.
- 4. Right click Mass Storage Controller, click Update Driver Software.
- 5. Click Browse my computer for driver software.

6. For Windows 7 32-bit: Type D:\Win7\32bit, click OK.

For Windows 7 64-bit / Server 2008 R2: Type D:\Win7\64bit\AMD64

(Change **D**: to match your CD/DVD-ROM drive letter)

7. Click **Next**, and click **Close**.

Windows Vista (32-/64-bit) / Server 2008 (32-/64-bit)

New Windows Vista (32-/64-bit) / Server 2008 (32-/64-bit) Installation

If you don't have two CD-ROM players, for 32-bit system, copy the contents of **Floppy** folder in the driver CD to your pen drive; for 64-bit system, copy the contents of **64bit** folder. Then follow the directions below:

- 1. Install the board and follow Microsoft procedures to install Windows accordingly.
- 2. At Install Windows or Windows Setup, click Next, then click Install now.
- 3. Click Browse.
- 4. *For 32-bit*: Double click **Floppy**, then click **OK**. *For 64-bit*: Double click **64bit**, select **AMD64**, then click **OK**.
- Select Silicon Image SiI 3132 ... Controller, click Next.
- 6. Check I accept the license terms, click Next.
- 7. Select **Custom...(advanced)**, then click **Next**.
- 8. Click **OK** to continue. Skip this step if not prompted.
- 9. Wait several seconds, then follow the on-screen instructions to complete Windows installation.

Existing Windows Vista (32-/64-bit) / Server 2008 (32-/64-bit) Installation

- 1. Install the board and boot up Windows.
- 2. At the **Found New Hardware**, click **Cancel**.
- 3. Check **Device Manager**, right click **Mass Storage Controller** under Other devices, then click **Update Driver Software**.
- 4. Click **Browse my computer for driver software**. Insert the driver CD.
- 5. <u>For 32-bit</u>: Type **D:\Floppy** <u>For 64-bit</u>: Type **D:\64bit\AMD64** (Change **D:** to match your CD/DVD-ROM drive letter)
- 6. Click **Next**, and click **Close**.

Windows XP (32-/64-bit) / Server 2003 (32-/64-bit)

New Windows XP (32-bit) / 2003 (32-bit) Installation

A floppy disk for the driver installation is required. Copy the contents of the **Floppy** folder in the driver CD to your blank floppy disk. Then follow the directions below:

- 1. Install the board and follow Microsoft procedures to install Windows accordingly.
- 2. At the Windows Setup screen, press F6 to continue.
- 3. Insert the driver floppy disk you made above. Press **S**, then press **Enter**.
- 4. Select Silicon Image SiI 3132 ... Controller for Windows XP and Server 2003, then press Enter.
- 5. Press **Enter** again and follow the on-screen instructions to complete the installation.

New Windows XP (64-bit) / 2003 (64-bit) Installation

A floppy disk for the driver installation is required. Copy the contents of the **64bit** folder in the driver CD to your blank floppy disk. Then follow the directions below:

- 1. Install the board and follow Microsoft procedures to install Windows accordingly.
- 2. At the **Windows Setup** screen, press **F6** to continue.
- 3. Insert the driver floppy disk you made above. When prompted, press **S**, then press **Enter**.
- 4. Select Silicon Image SiI 3132 ... Controller (64-bit Extended), and press Enter.
- 5. Press **Enter** again to continue and follow the onscreen instructions to complete the installation.

Existing Windows XP (32-/64-bit) / 2003 (32-/64-bit) Installation

- 1. Install the board and boot up Windows.
- 2. Insert the driver CD.
- 3. At the **Found New Hardware**, select **No**, **not this time**, click **Next**. Skip this step if not prompted.
- 3. Select Install from a list or a specific location (Advanced), then click Next.
- 4. Check **Include this location in the search**, uncheck the other box.

For 32-bit: Type **D:\Floppy**

For 64-bit: Type **D:\64bit\AMD64**

(Change **D**: to match your CD/DVD-ROM drive letter)

5. Click **Next**, and click **Finish** to complete the installation.

Windows 2000

New Windows 2000 Installation

A floppy disk for the driver installation is required. Copy the contents of **Floppy** folder in the driver CD to your blank floppy disk. Then follow the directions below:

- 1. Install the board and follow Microsoft procedures to install Windows 2000 accordingly.
- 2. At the **Windows 2000 Setup** screen, press **F6**.
- 3. Insert the driver floppy disk you made above. Press **S**, then press **Enter**.
- 4. Select Silicon Image SiI 3132 ... Controller for Windows 2000 and press Enter.
- 5. Press **Enter** again to continue and follow the onscreen instructions to complete the installation.

Existing Windows 2000 Installation

- 1. Install the board and boot up Windows 2000.
- 2. At the Found New Hardware Wizard, click Next.
- 3. Select **Search for a suitable driver for my device** (recommended), and click **Next**.
- 4. Insert the driver CD, check **Specify a location**, uncheck the other boxes, click **Next**.
- Type D:\Floppy , click OK, and click Next.
 (Change D: to match your CD/DVD-ROM drive letter)
- 6. Click **Finish** to complete the installation.

To Verify Windows Installation

- 1. Use Device Manager to verify installation. For Windows 8 / 7 / XP / Server 2003 & 2008 R2 / 2000:
- Right click Computer or My Computer, click Manage, click Device Manager.

 For Windows Vista: Right click Computer, click Manage, click Continue. Click Device Manager.
 - For Windows Server 2008: Right click Computer, Manage. Double click Diagnostics, click Device Manager.
- 2. Double click either SCSI and RAID controllers or Storage controllers. Silicon Image SiI 3132 ... Controller should be displayed.